




Park Position

The windshield wiper pivot arm and windshield wiper blade assemblies are positioned using a key and a keyway. If adjustment is required, perform the following:

1. Remove windshield wiper pivot arm and windshield wiper blade assembly as outlined.

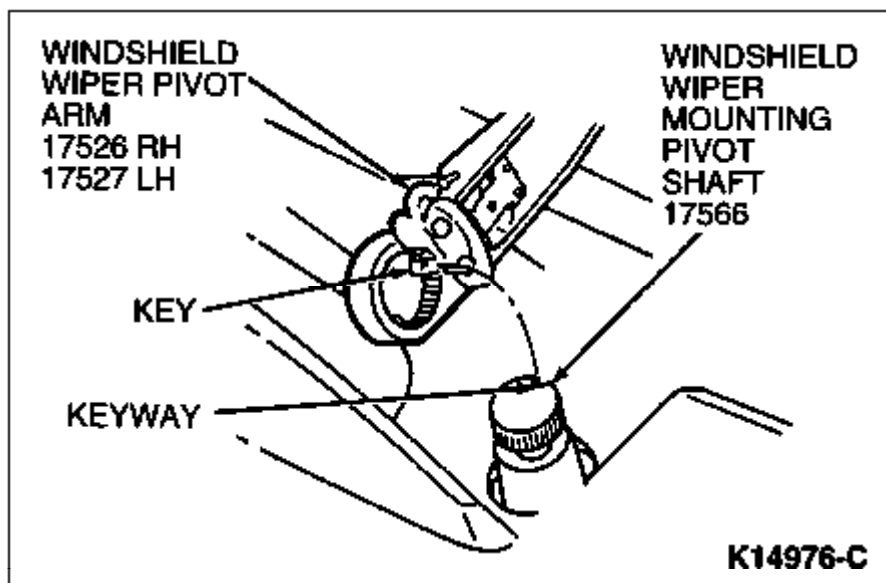


2. Using a small flat-end screwdriver, remove plastic key from windshield wiper pivot arm.

NOTE:

Prior to installation of windshield wiper pivot arms and windshield wiper blades, operate turn signal and windshield wiper switch to cycle windshield wiper mounting arm and pivot shaft to the parked position.

3. Locate windshield wiper blade to installation position.

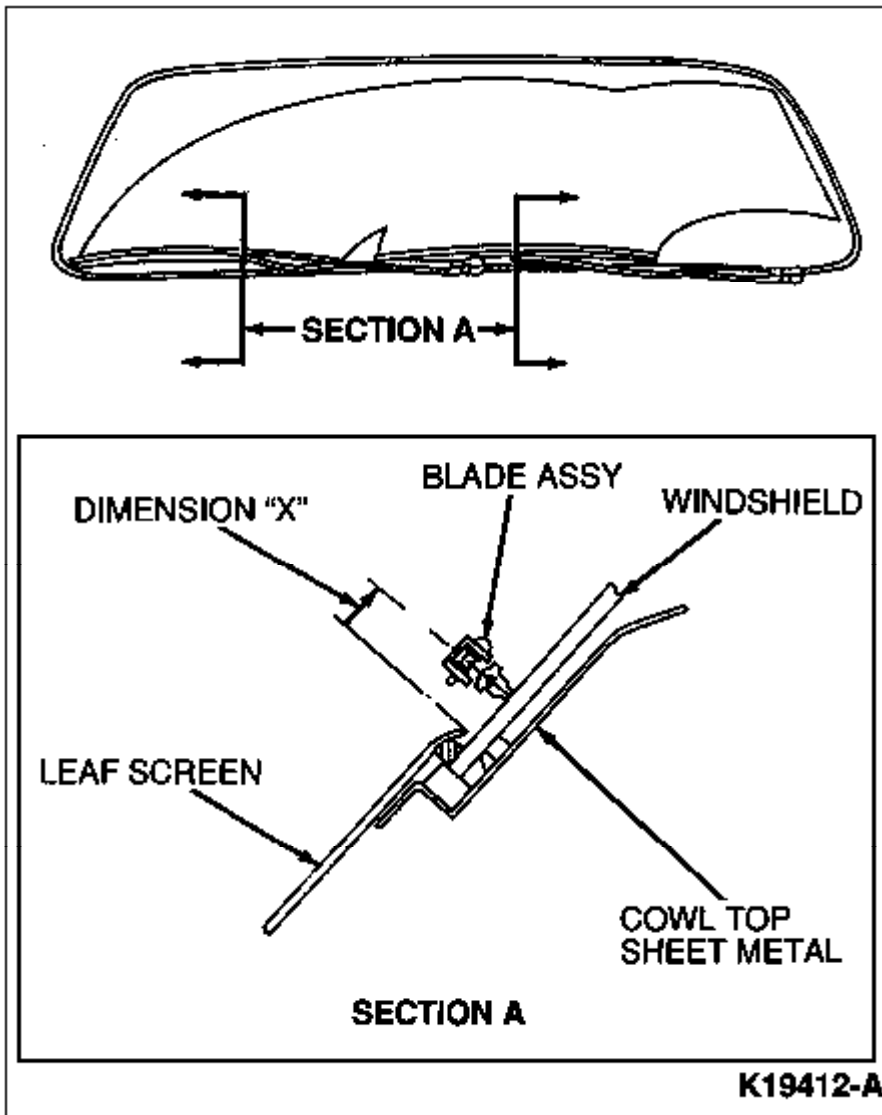

DIMENSION "X"

Driver Side	Passenger Side
+42.0 mm to +60.0 mm	+10.0 mm to +70.0 mm

4. Install windshield wiper pivot arm on windshield wiper mounting arm and pivot shaft and apply downward pressure on windshield wiper pivot arm head. Allow latch to slide under windshield wiper mounting arm and pivot shaft and slide latch using finger pressure only.

NOTE:

Raise windshield wiper pivot arm slightly to allow latch to slide under windshield wiper mounting arm and pivot shaft.

5. Lower windshield wiper pivot arm to windshield wiper arm stops (17C549).