

Control Relay Module, Variable

Removal and Installation

1. Remove radiator upper sight shield (8C291).
2. Disconnect electrical connector.
3. Remove variable load control module (VLCM) retainer bolt located at the lower end of the module and remove VLCM.
4. To install, reverse Removal procedures. Tighten VLCM bracket retainer bolt to 9.5 Nm (85 lb-in).

